INSTRUCTION MANUAL


PROBE SS-0012• SS-0013 SS-0014 SS-0042• SS-0043 SS-0044



取扱説明書

INSTRUCTION MANUAL

PROBE SS-0012• SS-0013 SS-0014 SS-0042• SS-0043 SS-0044

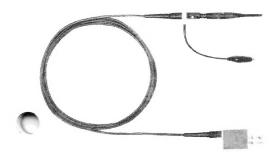

プローブ・SS-0012/0013/0014/0042/0043/0044は,入力抵抗が1MΩの電子測定器へ電気信号を入力するための,減衰比が10:1の小形受動プローブです。


これらのプローブは、マッチングボックスが直線形になって いますので、信号入力コネクタが正面パネルに取付けてある測 定器に接続して使用するのに適しています。 プローブ・SS-0012/0013/0014/0042/0043/0044の性能は、表1のとおりです。

表1 SS-0012/0013/0014/0042/0043/0044の性能

表1 88-0012/00	<u>) </u>	42/0043/00	1440/1生能			
<u>表1 SS-0012/00</u> 性 能	SS-0012	SS-0013	SS-0014	SS-0042	SS-0043	SS-0044
減 衰 比	10:1±2%	10:1±2%	10:1±2%	10:1±2%	$10:1\pm 2\%$	10:1±2%
入 力 容 量	$14 \mathrm{pF} \pm 2 \mathrm{pF}$	$13 \mathrm{pF} \pm 2 \mathrm{pF}$	$13 \mathrm{pF} \pm 2 \mathrm{pF}$	$17 \mathrm{pF} \pm 2 \mathrm{pF}$	$15 \mathrm{pF} \pm 2 \mathrm{pF}$	15pF±2pF
適合入力容量	22~ 26pF	$12 \sim 16 \mathrm{pF}$	15 ~ 19pF	22~ 26pF	12 ~ 16 pF	15∼ 19pF
周波数帯域幅	DC~ 100MHz	$DC \sim 300MHz$	$DC \sim 350MHz$	DC~100MHz	D C ~ 300MHz	DC ~ 350MHz
	\pm 1 dB	±1 dB	\pm 1 dB	\pm 1.5 dB	±1.5 dB	± 1.5 dB
入 力 耐 圧	図1参照	図1参照	図1参照	図1参照	図1参照	図1参照
GND • REF	あり	あり	あり	あり	あり	あり -
プローブの長さ	1. 5 m	1.5 m	1.5 m	2 m	2 m	2 m
コネクタ形式	BNC形	BNC形	BNC形	BNC形	BNC形	BNC形
マッチングボックスの 形 状	直線形	直線形	直線形	直線形	直線形	直線形
主な適合機種	SS-5711	SS-6300	SS-5421	SS-5711	SS-6300	SS-5421
	SS-6050	SS-6200	SS-5321	SS-6050	SS-6200	SS-5321
		SS-6150	SS-5221		SS-6150	SS-5221
		SS-6100	SS-5121/B		SS-6100	SS-5121/B

〈注〉

入力容量, 周波数帯域幅および入力耐圧は, プローブ単体の性能です。

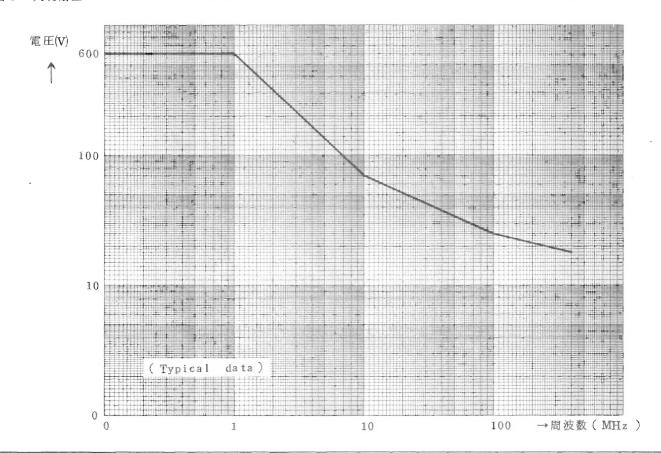

使い方

接続方法

- (1) マッチングボックス側のBNCコネクタを,測定器の信号 入力コネクタに接続します。
- (2) アースリードのワニロクリップを,信号源近くのアース点に接続します。
- (3) プローブの先端(または付属品の矢形チップ, ICリード) を信号源に触れます。

正しい使い方

- ○入力信号を測定するときは、〈低周波位相〉および〈高周波 位相〉が正しく校正されていることが必要です。
- ○入力信号を測定するときは、必ず、付属品のアースリードを使用し、かつ、できるだけ信号源の近くに接地します。 なお、30MHz以上の信号を測定するときは、付属品のアースピンを使用してください。

プローブを使用したときの利点

- o入力インビーダンスが高くなり、信号源に対する負荷効果が 軽減されます。
- o 外部電界による観測波形への誘導妨害が防止できます。
- ○信号源との接続が容易に、かつ確実にできます。

GND・REFの使い方

プローブ先端のGND REF(グランドリファレンス)ボタンを押すと、プローブの先端をアースに接触させることなく、通常、測定の基準レベルとされるグランドレベルを知ることができます。

付属品の使い方


矢 形 チ ップ プローブの先端部を,被測定点に固定するとき に使用します。

プローブの先端部に差込み,つばを引くと先端 にカギ形の接触子が出ますので,それを信号源 に引っかけて固定させます。

- I C リード I Cのピンの信号を測定するときに使用します。 クリップのつばを引くと先端にカギ形の接触子 が出ますので、それを I C のピンにつなぎます。 I C ピンにつなぐときは、機器の電源スイッチ をオフにするか、接触子が隣接する I C ピンに 触れないように注意してください。
- アースリード 信号源と測定器との共通アースをとるときに使用します。 ネジ部はアースカバーにねじ込み,クリップ部は信号源の近くのアース点に咬み合わせます。
- アースピン プローブ先端の接触子で、周波数成分が30MHz 以上の信号源に直接触れるとき、アースをとる ため、先端の金属部(アース部)へはめて使用 します。
- 絶縁キャップ プローブ先端の接触子で,直接信号源に触れる とき,先端の金属部(アース部)が露出します ので,これを被うのに使用します。
- カラーリング 同色のものをケーブルの両端に取付けて,プローブの接続チャンネルを色分けするために使用します。

調整用ドライバ

位相調整を行うときに使用します。 無誘導性ドライバです。

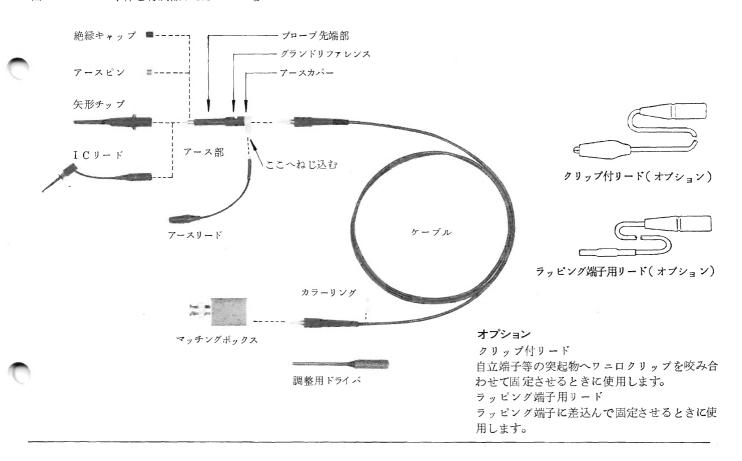

測定方法

入力信号の電圧測定

減衰比が10:1のプローブを通して信号を測定器に入力すると,入力信号の大きさは $^{1}/_{10}$ に減衰されます。

スコープ等へ被測定信号を入力し,ブラウン管面に波形を表示し,表示波形より入力信号の電圧を測定するときは,次式より求めます。

入力信号の電圧(V)⇒測定器の入力感度(VOLTS/DIVなど) の指示値×入力信号の管面振幅(div) ×プローブの減衰量の逆数

高周波信号の測定

高周波信号を測定するときは、信号源とプローブとの間での アースのとり方によっては高周波成分を減衰させ、誤まった波 形観測を行いますので、付属品のアースピンを使用します。

高電圧測定


プローブで測定できる電圧は、600 V (DC+ AC peak)ですが、600 V以上の直流高電圧に重畳しているリップル等を測定するときは、プローブの先端に、高電圧用の適当なコンデンサを接続し、コンデンサを通して信号を入力することができます。

方形波特性の点検と校正

低周波位相の点検と校正

- (1) プローブのマッチングボックス側のコネクタを, スコープ 等の測定器の信号入力コネクタへ接続します。
- (2) プローブの先端部に CAL OUT 等の 1 kHz 方形波を入力 します。
- (3) 測定器の入力感度を最高の位置に設定し、管面振幅が 4~6 div となるよう、方形波発生器の出力を調整します。
- (4) 管面波形の平担部が、図3の(a)のように平担になっている か点検します。もし、(b)、(c)のように歪んでいるときは、付 属品の調整用ドライバで、マッチングボックスの調整用穴か らC2(図7,図8参照)を調整して、波形を平担にします。

図3 低周波位相の波形

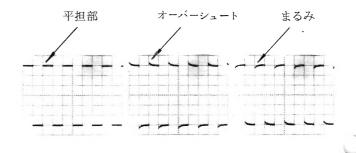

(a) 適 正 (b)不適正(過補償)(c)不適正(補償不足)

高周波位相の点検と校正

高周波位相に異常があると、周波数成分の高い信号を観測す るときに測定誤差を生じますので,必要に応じて点検し,異常 があるときは校正します。

< 必要とする測定器とアクセサリ>

高周波位相の点検と校正を行うときは、次に示す測定器等が 必要です。

。パルス発生器

立上り時間

300pS以下

出力電圧

0~1 V p-p程度

パルス幅

300nS以上

波形歪

少いこと

<例>

岩通製パルス発生器・PG-10P/10N

。 標準信号発生器

周波数範囲

50kHz~ 350MHz以上

出力電圧

10mV ~ 1V 程度

シンクロスコープ

周波数帯域幅

DC~350MHz

 $DC \sim 1.00 MHz$

入力容量

 $15 \sim 19 \, pF$

 $22 \sim 26 \, pF$

<例>

岩通製シンクロスコープ SS-5421 SS-5711

50Ω同軸ケーブル

50Ωターミネータ

<例>

岩涌製 BB 50M 1

。 BNC − J コネ ク タ

<例>

岩通製 BNC-Jアダプタ

50Ω同軸アッテネータ(6dB, 10dB, 20dB)

岩通製 AA-06B AA-10B

AA-20B

〈注意〉

- o 測定器は、いずれも校正されていることが必要です。
- o組合わせて使用する測定器に接続して校正しても支障あ りませんが、そのプローブを他の測定器に接続して使用 するときは、その状態で再び校正することが必要です。

<点検>

- (1) 低周波位相が校正されているか点検し、位相が合っていな いときは校正します。
- (2) プローブ、シンクロスコープ、パルス発生器を接続し(図 4 参照)、電源スイッチをオンにします。
- (3) シンクロスコープを次のように設定します。

VOLTS/DIV 10mV/div

VARIABLE

CAL

- (4) ブラウン管面上で、パルス波形の振幅が4~5 divになる よう、パルス発生器の出力を調整します。出力電圧が大きす ぎる場合は、50Ω同軸アッテネータを使用し、必要な電圧 まで出力を減衰させます。
- (5) パルス波形の立上り部が描かれるように、シンクロスコー プの掃引時間を設定します。
- (6) 管面のパルス波形に、オーバーシュート、アンダーシュー ト, リンギング, サグ等の波形歪がないか点検します。
- (7) シンクロスコープの信号入力コネクタよりプローブを外し、 代りに標準信号発生器の出力を、20dBの同軸アッテネータ

(AA-20B)を通して接続します。

- (8) シンクロスコープの掃引時間を 0.1mS/di v から10 μS / di vのいずれかのレンジに設定します。標準信号発生器の 周波数を,プローブの周波数帯域幅の上限周波数に設定します。
- (9) ブラウン管面上で6 div の振幅が得られるように、標準信号発生器の出力を調整します。
- (10) 20 dB の同軸アッテネータを外し、プローブを接続し(接続方法はパルス発生器の場合と同じ)、プローブを通して標準信号発生器の出力をシンクロスコープへ入力します。
- (11) そのとき、管面での振幅が $5.4 \sim 6.6 \, \mathrm{div}$ (振幅 $6 \, \mathrm{div}$ に 対する $\pm 1 \, \mathrm{dB}$)、または $5.1 \sim 6.9 \, \mathrm{div}$ (振幅 $6 \, \mathrm{div}$ に対する $\pm 1.5 \, \mathrm{dB}$) になるか点検します。
- (12) 以上の点検により、方形波特性、周波数帯域幅、または両

方とも規格外または特に性能を向上させたいときは,次に述べる校正を行ってください。

〈校正〉

- (1) マッチングボックスのカバーを外した後,(図9参照) 〈点検〉の(2)から(6)項までの操作を行います。
- (2) 付属品の調整用ドライバで、マッチングボックス内の調整器を調整します。
 - このときパルス波形の立上り部が鋭くなるように,またオーバーシュート,アンダーシュート,リンギング,マッチング 歪ができるだけ小さくなるように調整します。
- (3) < 点検>の(8)から(11)項までの操作を行い, 周波数帯域幅の 点検を行います。

図4 プローブとシンクロスコープおよびパルス発生器との接続


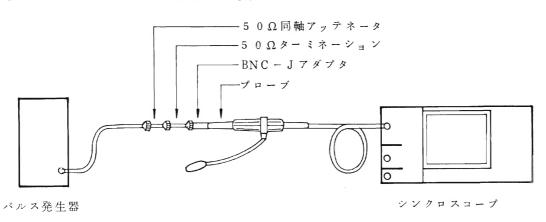


図5 パルスの各部用語の定義 (電子機械工業会MEA-27による)-----

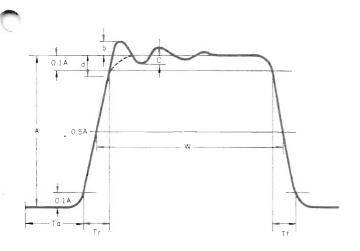

A:基本振幅 Tr:立上り時間

 $\frac{b}{A}$: オーバシュート Tf: 下降時間

W: パルス幅 Td: 信号遅延時間

図6 高周波位相のパルス波形と調整箇所 ——



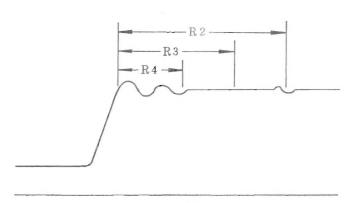


図7 マッチングボックス内の調整器(1) -

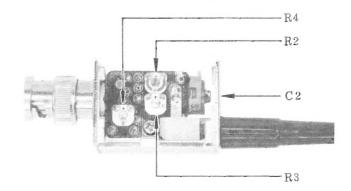

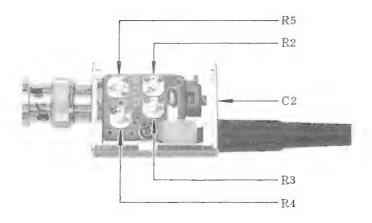


マッチングボックスのカバーの取外し方

高周波位相を校正するときは、マッチングボックスのカバー を取外すことが必要です。

カバーは、図9のように、カバーの縁を親指で外側へ押出します。

図9 マッチングボックスのカバーの取外し方 -

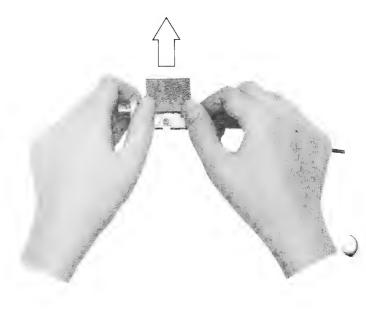

SUMMARY

Models SS-0012/0013/0014/0042/0043/0044 are samll probes of passive type with attenuation ratio 10 : 1 used for providing electric signals to electronic measuring instruments with input impedance of 1 M Ω .

These probes are suited for use by connecting to measuring instruments with input signal connector installed on its front panel since their matching boxes are in straight form.

SPECIFICATIONS


The specification for probes SS-0012/0013/0014/0042/ 0043/0044 are shown in Table 1.

Table 1. Specifications of 0012/0013/0014/0042/0043/

Table 1. Specifications of SS-0012/0013/0014/0042/0043/0044

SPECIFICATIONS	SS-0012	SS-0013	SS-0014	SS-0042	SS-0043	SS-0044
Attenuation ratio	10:1 ±2%	10:1 ±2%	10 : 1 ±2%	10 :1 ±2%	10 : 1 ±2%	10 : 1 ±2%
Input capacity	14pF ± 2pF	13pF ± 2pF	13pF ± 2pF	17pF ± 2pF	15pF ± 2pF	15pF ± 2pF
Matching input capacity	22 to 26pF	12 to 16pF	15 to 19pF	22 to 26pF	12 to 16pF	15 to 19pF
Frequency bandwidth	DC to 100MHz ±1dB	DC to 300MHz ± 1dB	DC to 350MHz ±1dB	DC to 100MHz ± 1.5dB	DC to 300MHz ± 1.5dB	DC to 350MHz ± 1.5dB
Input voltage	See Figure 1.	See Figure 1.	See Figure 1.	See Figure 1.	See Figure 1.	See Figure 1.
GND REF	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
Probe length	1.5m	1.5m	1.5m	2m	2m	2m
Type of connector	BNC type	BNC type	BNC type	BNC type	BNC type	BNC type
Form of matching box	Straight	Straight	Straight	Straight	Straight	Straight
Major applicable type of instrument	SS-5711 SS-6050	SS-6300 SS-6200 SS-6150 SS-6100	SS-5421 SS-5321 SS-5221 SS-5121/B	SS-5711 SS-6050	SS-6300 SS-6200 SS-6150 SS-6100	SS-5421 SS-5321 SS-5221 SS-5121/B

< Note>: The data for input capacity, frequency bandwidth, and allowable input voltage are referred to single probe.

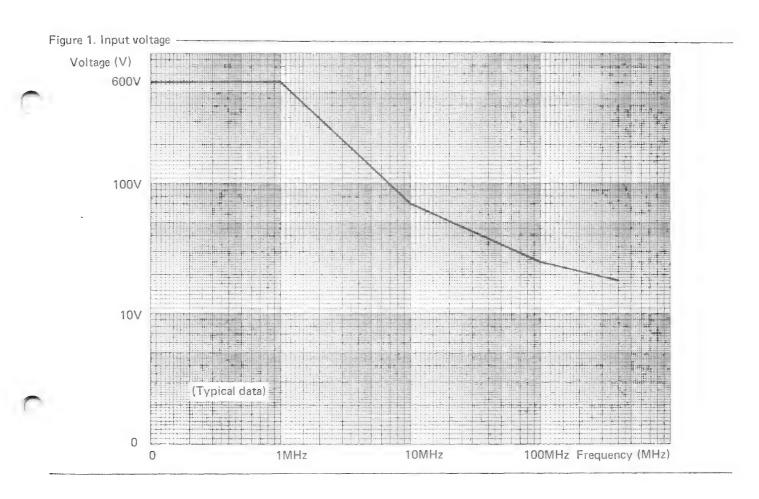

INSTRUCTION FOR USE

Connection

- (1) Connect BNC connector on the matching box side to signal input connector of measuring instrument.
- (2) Connect alligator clip of earth lead to the earth point close to the signal source.
- (3) Touch the probe tip (or with arrow tip, or IC lead) to signal source.

Correct use

- O < Low frequency phase > and < high frequency phase > should be correctly calibrated for measurement of input signal.
- Connect the earth lead of accessory to ground at a point as close to the signal source as possible for correct measurement of input signal. The earth pin of accessory should be used for measuring signal higher their 30 MHz.

Advantages in the use of probe

- A high input impedance is achieved which reduces load effect to the signal source.
- o Inductive interference in observed waveform due to external electric field is greatly eliminated.
- Connection to signal source can be done more simply and accurately.

Use of GND REF

Push the GND REF. (Ground reference) button on the tip of probe. Reference ground level to the measurement is detected without making any contact with the tip of probe to ground.



Use of accessories

Arrow tip

The arrow tip is used for fastening the tip of probe to the point to be measured.

Cover it on the probe tip and pull the flange so as to expose the hook contactor at the tip. Hook the contactor to signal source and lasten firmly.

IC lead

The IC lead is used for measuring signal from IC pin. Pull the flange of clip so as to expose hook contactor.

Connect it to IC pin. Turn off the power supply, or keep the contactor among from adjacent IC pins when connecting the hook to IC pin.

Earth lead

The earth lead is used for providing common ground of signal source and instrument. Screw in the threaded part to earth cover, and engage the clipper to ground point close to signal source.

Earth pin

The earth pin is covered on metallic part (earthing part) at the tip for grounding when the contactor at the tip of probe directly is in contact with the signal source with frequency components higher than 30MHz.

Insulation cap

Insulation cap is used for covering metallic part (earthing part) at the tip of probe when the contactor at the tip directly is in contact with the signal source.

Color rings

Attach rings of same color to identify the connecting channel at the probe by color.

Adjusting screw-driver

Used to probe phase adjustment. Non-induction screw-driver.

Option


Lead equipped with clip

Used for fastening lead to projection such as self-standing terminal by engaging alligator clip to it.

Lead for lapping terminal

Used for fastening lead by inserting it into lapping terminal

Figure 2. Probe unit and its standard/optional accessories

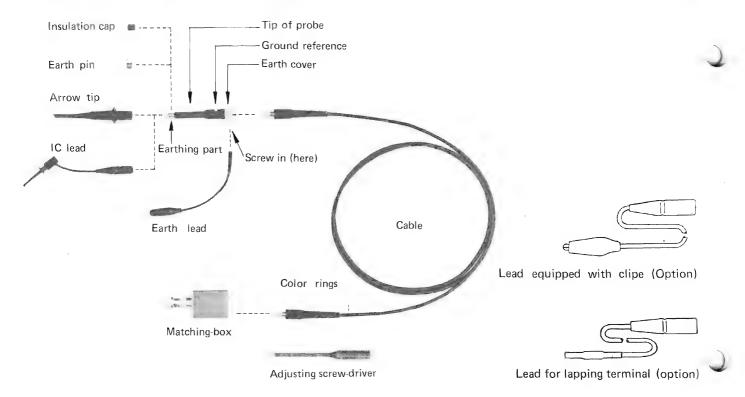

MEASURING METHODS

Measurement of input signal voltage

Amplitude of input signal is attenuated to 1/10 by feeding the signal into measuring instrument through a probe with an attenuation ratio of 10:1.

Input signal voltage can be calculated from waveform displayed on the CRT screen of oscilloscope in which signal to be measured is fed, as in the following formula:

Input signal voltage (V) = Indicated value of input sensitivity (VOLTS/DIV) of the instrument x amplitude of input signal on the CRT screen (div) x reciprocal of attenuation of probe.

Measurement of high-frequency signal

The earth pin of accessory is used for measuring high-frequency signals. Wrong waveform may be observed by incorrect earthing between signal source and probe which would attenuate high-frequency components.

Measurement of high voltage


While the probe can measure voltage up to 600V (DC + peak AC), it can also measure ripples superimposed on DC voltage higher than 600 V by feeding the signal through a high voltage capacitor connected to the tip of probe.

CHECK AND CALIBRATION OF SQUARE WAVE CHARACTERISTICS

Check and calibration of low-frequency phase

- (1) Connect the BNC connector on matching-box side of probe to the signal input connector of instrument.
- (2) Apply the square wave of 1 kHz of the square wave generator or the CAL OUT of oscilloscope to the tip of probe.
- (3) Set the input sensitivity of instrument to the highest

Figure 3. Waveform of low-frequency phase

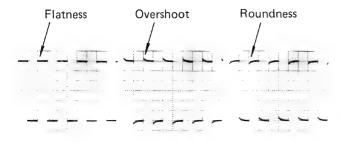

- (a) Correct waveform
- (b) Excessive compensation
- (c) Insufficient compensation

- range, and adjust the output signal amplitude of square wave generator so that an amplitude of 4 to 6 div. is obtained on the CRT screen.
- (4) Check whether the correct square waveform as shown in Figure 3 (a) can be obtain. If destortion appears as shown ain Figure. 3 (b) or (c), adjust C2 with the adjusting screw driver through the adjusting hole of matching-box so as to obtain a flat waveform.

Check and calibration of high-frequency phase

Check high-frequency phase whenever necessary and callibrate if it is unacceptable. An abnormal high-frequency phase may cause error in measurements of signals with high-frequency components.

< Instruments and accessories required>

The following instruments and accessories are required for check and calibration of high-frequency phase.

Pulse generator

Rise time 300pS or faster

Output voltage Approximately 0 to 1Vp-p

Pulse width 300nS or more
Waveform distortion As small as possible

Example: IWATSU PG-10P/10N

Standard signal generator

Frequency range 50kHz to 350MHz

Output voltage Approximately 10mV to 1V

Oscilloscope

Frequency bandwidth

DC to 350MHz

DC to 100MHz

Input capacity 15 to 19pF

22 to 26pF

Example: IWATSU SS-5421

SS-5711

50 Ωcoaxial cable

50 Ω terminator Example: IWATSU BB50M1

BNC-J connector Example: IWATSU BNC-J adaptor

 50Ω coaxial attenuator (6dB, 10dB, 20dB)

Example: IWATSU AA-06B

AA-10B AA-20B

< Caution >

- Measuring instruments need to be calibrated.
- Probe also needs to be calibrated if it is to be connected to other instruments. Otherwise, there will not be any difficulty in calibrating the probe to connect with measuring instruments in use.

< Check>

- (1) Check for proper calibration of low-frequency phase.


 If phase is not calibrated correctly, adjust it.
- (2) Connect the probe, oscilloscope, and pulse generator (see Figure 4), and turn on the power switch.
- (3) Set the oscilloscope as follows:

VOLTS/DIV 10 mV/div VARIABLE CAL

(4) Adjust the output voltage of pulse generator so that an amplitude of pulse waveform become 4 to 5 div. on the CRT screen. If the output voltage is excessively high,

- attenuated the voltage to adequate level by $50\Omega\,\text{coaxial}$ attenuator.
- (5) Set the sweep time of oscilloscope so as to observe a rising edge of pulse waveform.
- (6) Check whether the waveform on screen recognizes any distortion such as overshoot, undershoot, ringing, or sag.
- Figure 4. Connection of probe to oscilloscope and pulse generator

- (7) Disconnect the probe from signal input connector of oscilloscope and connect the output connector of the standard signal generator through the 20dB coaxial attenuator (AA-20B).
- (8) Set the sweep time of oscilloscope to one range from 0.1 mS/div to 10 μ S/div. Set the frequency of standard signal generator to upper limit frequency of bandwidth

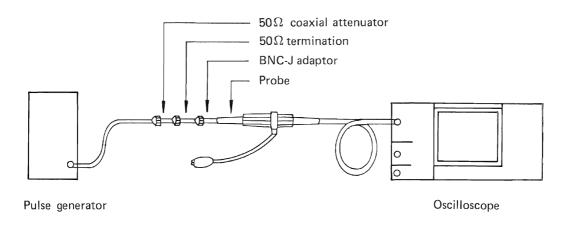

of probe.

- (9) Adjust the output voltage of standard signal generator so that an amplitude of 6 div is obtained on the CRT screen.
- (10) Disconnect the 20dB coaxial attenuator. Connect the probe (in a similar manner as of pulse generator) and feed the output voltage of standard signal generator to oscilloscope.
- (11) Check and confirm whether the signal amplitude on the CRT screen is 5.4 to 6.6div (±1dB for amplitude 6 div) or 5.1 to 6.9div. (±1.5dB for amplitude 6 div).
- (12) If the above checking indicated that either one or both of square wave characteristics and frequency bandwidth


do not satisfy the specification, or if the performance is to be improved, calibrated it as in the following.

< Calibration >

- (1) Remove the cover of matching-box and check the procedure form (2) to (6) indicated in check list.
- (2) Adjust the controls in matching-box with the adjusting screw-driver of accessory.
- (3) Adjust so that the rising of pulse wave becomes sharp, or distortion such as overshoot, undershoot, or ringing is minimized as possible.
- (4) Check the following items (8) through (11) indicated in check list for inspecting frequency bandwidth.

Figure 5. Definition of pulse terms

(According to MEA-27 by Japanese Electro-Mechanical Industry Association)

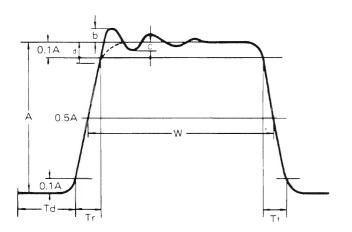

A : Basic amplitude

b/A : Overshoot c/A : Ringing


W : Pulsewidth

T : Rise time Tf : Fall time


d/A: Rounding


Td : Signal delay time

Figure 6. Pulse waveform and adjustment point of highfrequency phase

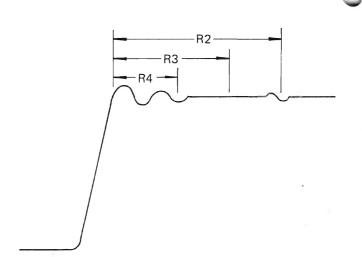



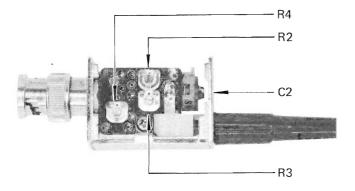

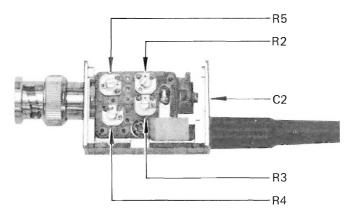

Removing the matching-box cover

The cover of matching-box should be removed for calibration of high-frequency phase.

Push up the edge of cover to outer side as shown in Figure 9.

Figure 9. Removing matching-box cover -

